





WARNING:


Assembly by an adult This product is intended to be used by children. Adult supervision is required at all times.

WARNING:

This product is NOT intended for climbing, or hanging from rings

Assembly instructions

- Place THE TRIANGULAR CORNER
 on the floor, as shown. Attach the
 center BASE STABLIZERS to link with the
 corners, and use the longer screws
 (Parts No.2) to secure in place.
- 2. Insert the BOTTOM LEGS into the BASE TUBE. Align hole, and use the short screws (Pars No. 5) to secure in place.
- Insert the UPPER LEGS (1, 2, 3) into the BOTTOM LEGS. Align holes and use the triangle screws (Parts No.1) to secure both legs together.
- Position the 18" CENTER hoop so that the TOP TUBES fit over the top ends of the legs. Align holes and use the triangle screws (Parts No. 1) to secure in place.
- 5. Attach the 14" OUTER RINGS to the UPPER LEGS. Align holes and use the long screws (Parts No. 3) and capped nut (Parts No. 4) to secure in place. Don't forget to insert washer locker (parts No. 6) in between)
- 6. Make sure all screws and capped nuts are securely tightened in place
- Use the plastic ring locks (Parts No.7) on each net hanger Attach the larger net (WHITE on TOP) to the CENTER RING, and the smaller nets to the OUTER RINGS.
- STORAGE BAG only for storage use .Please remove when children in play.

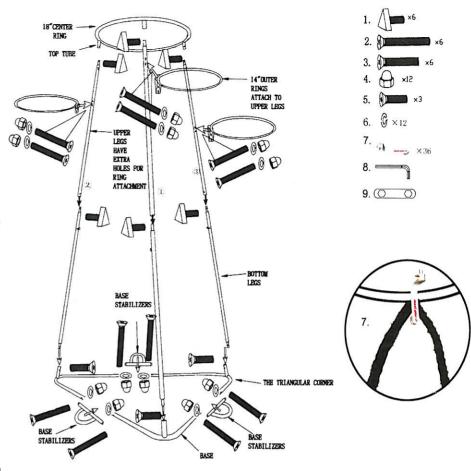

Important:

Please fasten all screws every time before use this stand. Do not discard these instructions. Keep this copy in a safe place

FOR SERVICE please contact:

USA: Call toll free: 1-877-726-1696 UK: Call 44-128-576-2033

www.childrensfactory.com www.educationessentials.co.uk

www.skoolplus.com

